
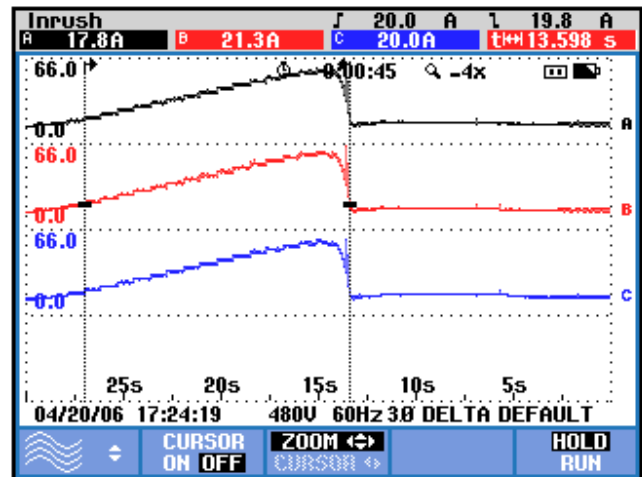
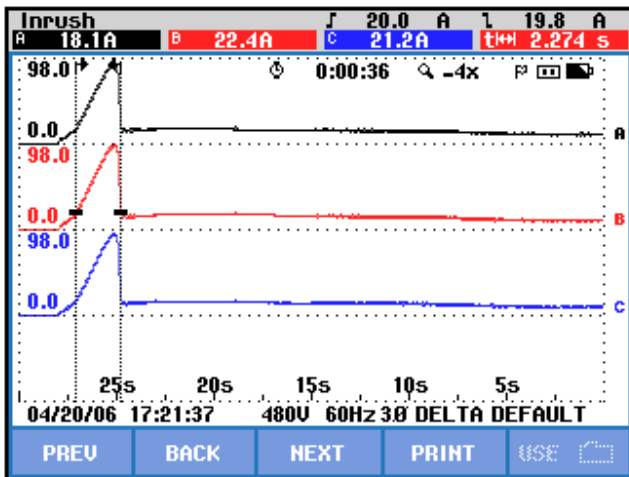
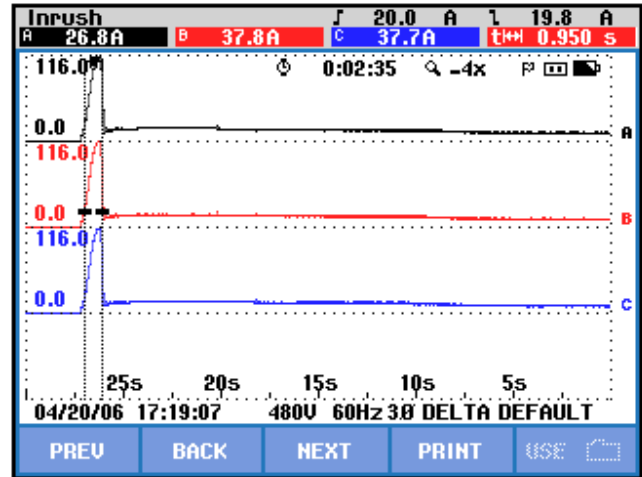


Effect of Soft Start

Southern Star

(Note the decrease in inrush current)

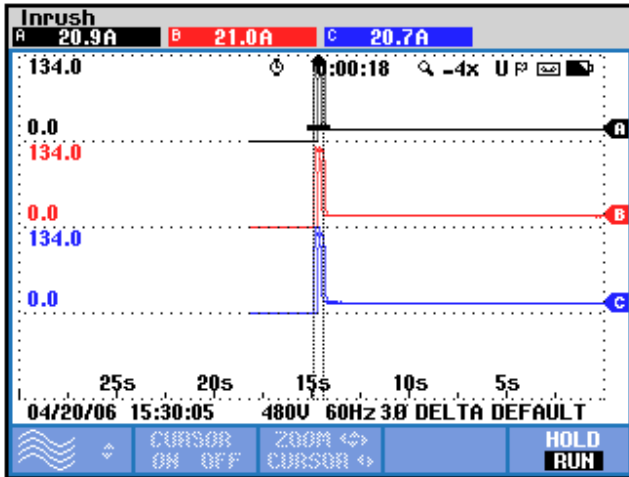

- | | | |
|---|--------------------|---------------------|
| 1. (Upper Left) Inrush without Integra Power. | No Soft Start | Inrush = 134.0 Amps |
| 2. (Upper Right) Inrush set at 10 o'clock Position. | Minimum Soft Start | Inrush = 116.0 Amps |
| 3. (Lower Left) Inrush set at 12 o'clock Position. | Small Soft Start | Inrush = 95.0 Amps |
| 4. (Lower Right) Inrush set at 2 o'clock Position | Longer Soft Start | Inrush = 66.0 Amps |